

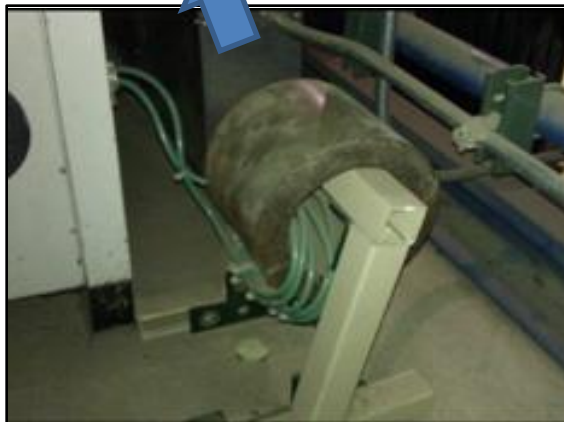
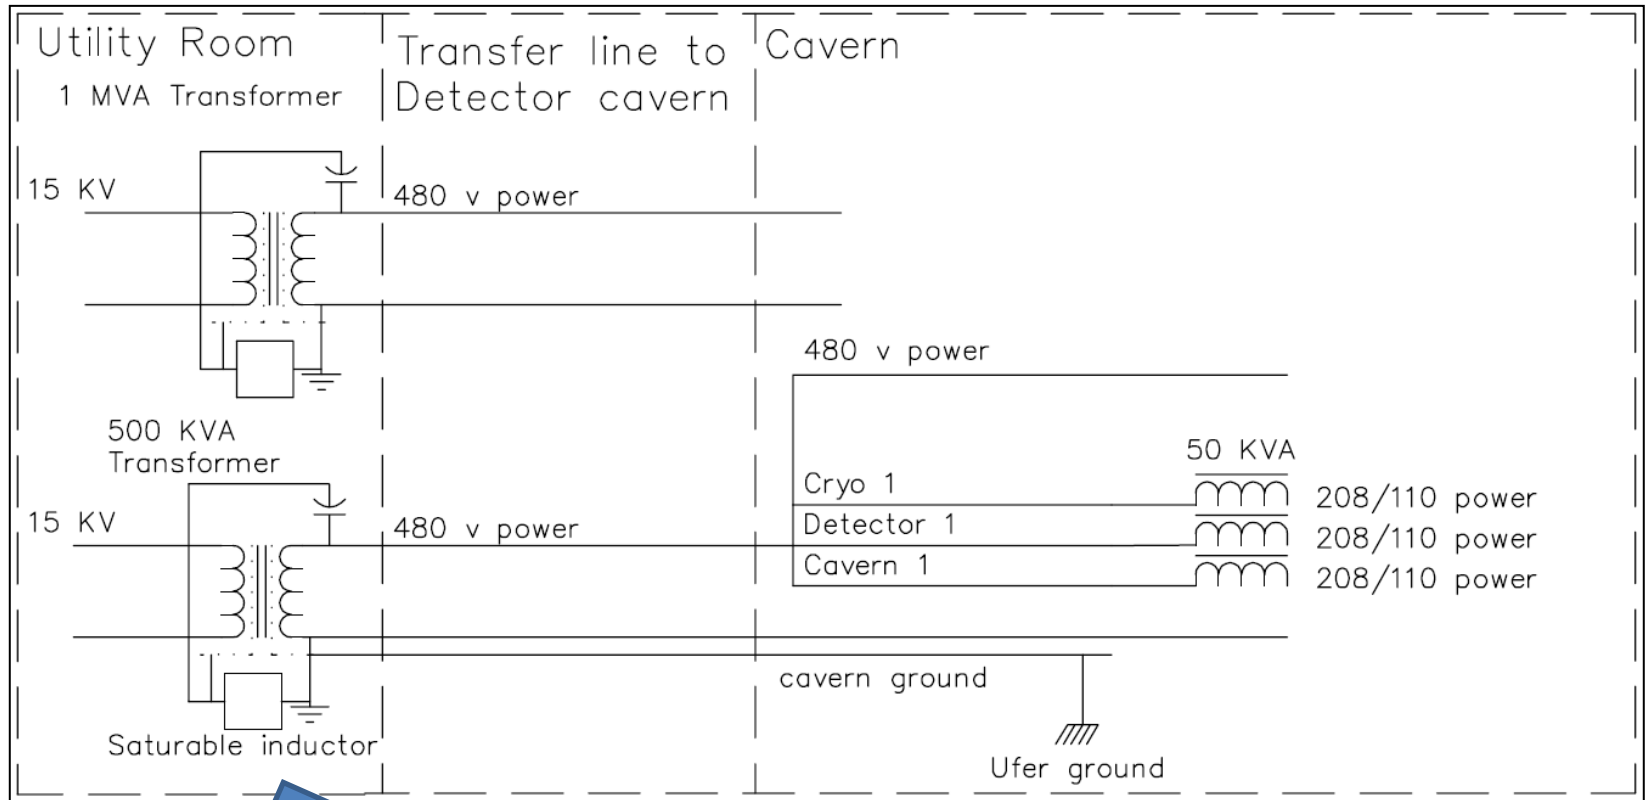


Block Diagram of the AC power for one cryostat

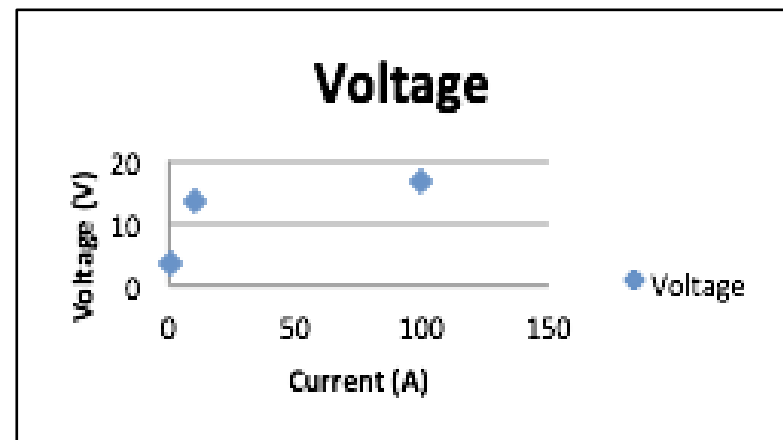

Saturable inductor used for ground isolation



Voltage developed across the inductor as a function of the fault current